


---

# CPM-1 INJECTED METAL ASSEMBLY™ SYSTEM

## OPERATION AND MAINTENANCE MANUAL

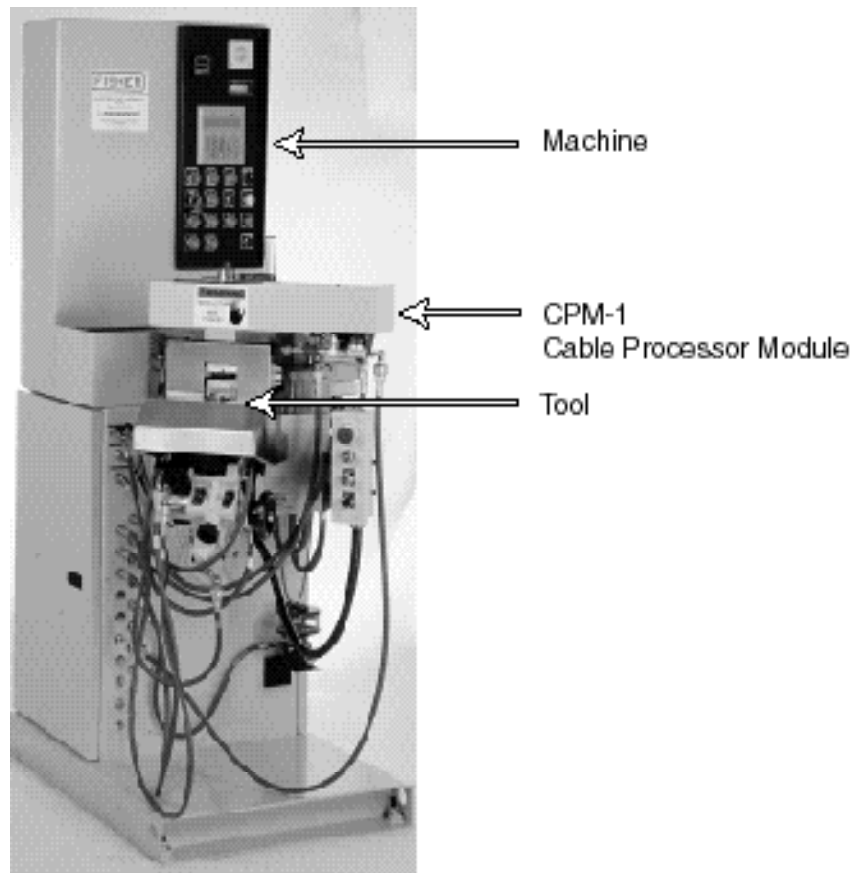

© 1999 Fisher Gauge Limited



---

# Contents

<b>DISCLAIMER</b> .....	<b>i</b>
<b>ABOUT THIS OPERATION AND MAINTENANCE MANUAL</b> .....	<b>ii</b>
<b>FOR YOUR SAFETY</b> .....	<b>iii</b>
<b>SAFETY PRECAUTIONS</b> .....	<b>iv</b>
<b>Personal protective attire and devices</b> .....	<b>iv</b>
<b>YOUR OPERATING AND MAINTENANCE MANUAL</b> .....	<b>vii</b>
<b>SECTION A: INTRODUCTION</b> .....	<b>A-1</b>
<b>Overview of the Injected Metal Assembly (IMA™) process</b> .....	<b>A-1</b>
<b>Introduction to the CPM-1 Injected Metal Assembly system</b> .....	<b>A-2</b>
<b>Fishertech's cable termination equipment</b> .....	<b>A-3</b>
<b>General equipment warranty</b> .....	<b>A-5</b>
<b>Equipment return procedure</b> .....	<b>A-6</b>
<b>Terminology pertaining to your IMA system</b> .....	<b>A-7</b>
<b>SECTION B1: MACHINE COMPONENTS</b> .....	<b>B1-1</b>
<b>Control panel</b> .....	<b>B1-1</b>
Push buttons .....	B1-2
Operator Interface module .....	B1-3
Melt pot temperature controller .....	B1-4
Cycle counter .....	B1-4
<b>Injection unit</b> .....	<b>B1-4</b>
Gooseneck assembly .....	B1-5
Y-bracket .....	B1-5
Plunger .....	B1-5
Link .....	B1-5
Injection lever .....	B1-5
Injection cylinder .....	B1-5
Injection nozzle .....	B1-5
Fill gap .....	B1-6
<b>Coolant supply and drain</b> .....	<b>B1-6</b>
Melt Pot frame cooling coil .....	B1-6
Tool coolant circuit .....	B1-6
<b>Nozzle heater</b> .....	<b>B1-6</b>
Pneumatic regulator .....	B1-6
Air and gas valves .....	B1-6
Mixing block .....	B1-6

---

Adjusting valves -----	B1-6
Twin torch tip -----	B1-7
<b>Melt pot -----</b>	<b>B1-7</b>
Melt pot frame -----	B1-7
Melt pot assembly -----	B1-7
<b>Thermocouple assembly -----</b>	<b>B1-7</b>
Protector tube -----	B1-7
Thermocouple -----	B1-7
<b>Ingot feeder (optional) -----</b>	<b>B1-7</b>
<b>Moving mechanism -----</b>	<b>B1-8</b>
Moving Mechanism Advanced limit switch -----	B1-8
Flow control valves -----	B1-8
Linkage -----	B1-9
Ratchet pin -----	B1-9
Link pin -----	B1-9
Hinge pin -----	B1-9
Hinge Pin-In-Place proximity switch -----	B1-9
<b>Push button station -----</b>	<b>B1-10</b>
Emergency Stop (E-Stop) illuminated push button -----	B1-10
Start push button -----	B1-10
Injection On illuminated push button -----	B1-10
Injection Off push button -----	B1-10
<b>Cavity lubricator -----</b>	<b>B1-11</b>
<b>Electrical enclosure -----</b>	<b>B1-11</b>
Time switch -----	B1-12
Main disconnect breaker -----	B1-13
Master Control Relay (MCR) -----	B1-13
Programmable Logic Controller (PLC) -----	B1-13
Fuses -----	B1-13
DC power supply -----	B1-13
Surge protector -----	B1-14
Melt pot heater contactor and solid state relay -----	B1-14
<b>Pneumatic system -----</b>	<b>B1-14</b>
Filter -----	B1-14
Quick Dump/Soft Start pneumatic supply valve -----	B1-15
Lubricator -----	B1-15
Pneumatic valves -----	B1-15
Injection accumulator -----	B1-15
Hoses -----	B1-15
Flow control valves -----	B1-15
<b>SECTION B2: CABLE PROCESSOR MODULE COMPONENTS -----</b>	<b>B2-1</b>
<b>Cable-In-Place sensor -----</b>	<b>B2-1</b>
Cable-In-Place pressure switch -----	B2-2

---

---

Hose -----	B2-2
Needle valve -----	B2-2
Pneumatic pressure regulator and gauge -----	B2-2
<b>Cable Processor Module Closed proximity switch -----</b>	<b>B2-2</b>
<b>Cam slot and roller -----</b>	<b>B2-3</b>
<b>Handle -----</b>	<b>B2-3</b>
<b>Flow control valves -----</b>	<b>B2-3</b>
<b>Main slide -----</b>	<b>B2-3</b>
<b>Open/Close cylinder -----</b>	<b>B2-3</b>
<b>Ejector system -----</b>	<b>B2-3</b>
Ejector pin -----	B2-4
Ejector pin retainer -----	B2-4
Ejector pin retracted stop screw -----	B2-4
<b>SECTION B3: CABLE PROCESSOR TOOLING COMPONENTS -----</b>	<b>B3-1</b>
<b>Cavity -----</b>	<b>B3-1</b>
<b>Fixed tool -----</b>	<b>B3-1</b>
<b>Movable tool -----</b>	<b>B3-2</b>
<b>SECTION C: THEORY OF OPERATION -----</b>	<b>C-1</b>
<b>Sprue type operation -----</b>	<b>C-1</b>
<b>Sprueless type operation -----</b>	<b>C-8</b>
<b>Nozzle heat balance -----</b>	<b>C-8</b>
<b>SECTION D: SYSTEM INSTALLATION -----</b>	<b>D-1</b>
<b>General system specifications -----</b>	<b>D-1</b>
Maximum injection capacity -----	D-1
Floor space required -----	D-1
Weight -----	D-1
Sound level -----	D-1
<b>System service requirements -----</b>	<b>D-2</b>
Electrical supply -----	D-2
Power conditioning -----	D-2
Pneumatic supply -----	D-2
Coolant supply -----	D-2
Coolant drain -----	D-2
Gas supply -----	D-2
Lubricants -----	D-3
Alloy -----	D-3
<b>Contamination of zinc alloy supplies -----</b>	<b>D-4</b>
<b>Preventing contamination of zinc alloy -----</b>	<b>D-4</b>
<b>Preventing change in alloy composition -----</b>	<b>D-5</b>
<b>Recycling zinc alloys -----</b>	<b>D-5</b>
<b>Installing the IMA system -----</b>	<b>D-6</b>
Uncrating system components -----	D-6

---

---

Lifting the machine -----	D-6
Positioning and levelling -----	D-7
Connecting the services -----	D-7
<b>Installing the tooling -----</b>	<b>D-7</b>
<b>SECTION E: SYSTEM SETUP -----</b>	<b>E- 1</b>
Turning the main breaker on -----	E- 1
Checking the pneumatic system -----	E- 1
Installing the tooling -----	E- 1
Checking the coolant system -----	E- 3
Turning the melt pot on -----	E- 3
Checking the nozzle heater -----	E- 3
Checking the nozzle alignment -----	E- 4
Checking timer settings -----	E- 4
<b>SECTION F: START UP AND OPERATION -----</b>	<b>F-1</b>
The operating sequence -----	F-1
System cycling -----	F-1
Dry cycle -----	F-1
Production cycle, manual mode -----	F-2
Production cycle, automatic mode -----	F-3
Operator's duties at the beginning of production -----	F-4
Operator's duties during production -----	F-4
Operator's duties at the end of production -----	F-6
<b>SECTION G: INJECTED METAL ASSEMBLY SYSTEM MAINTENANCE -----</b>	<b>G1-1</b>
<b>SECTION G1: MACHINE MAINTENANCE -----</b>	<b>G1-1</b>
Using the operator interface module to check switch settings -----	G1-2
Injection plunger removal and installation -----	G1-3
Injection plunger cleaning/injection sleeve reaming -----	G1-6
Injection unit removal and installation -----	G1-8
Fill gap adjustment -----	G1-10
Fitting the injection plunger to the sleeve -----	G1-12
The injection drop-out timer -----	G1-12
The injection accumulator -----	G1-12
Nozzle removal and replacement -----	G1-13
Lapping the nozzle -----	G1-15
Nozzle seat/nozzle tip alignment -----	G1-16
Nozzle alignment procedure -----	G1-17
The nozzle heater -----	G1-19
The electric nozzle heater (if used) -----	G1-19
Melt pot removal and installation -----	G1-20
Replacing the melt pot thermocouple -----	G1-22

---

---

Heating element replacement .....	G1-23
The moving mechanism and limit switch .....	G1-26
Pneumatic component lubricator adjustment .....	G1-28
Cavity lubricator - setup and adjustment .....	G1-29
Relief valve .....	G1-29
The pneumatic filter .....	G1-30
Quick Dump/Soft Start air supply valve .....	G1-30
Ingot feeder setup and adjustments (if used) .....	G1-31
Melt pot level adjustment .....	G1-31
Adjusting the Flow Control Valves .....	G1-31
Maintaining the melt pot level .....	G1-32
<b>SECTION G2: CABLE PROCESSOR MODULE MAINTENANCE .....</b>	<b>G2-1</b>
Cable Processor Module Closed proximity switch .....	G2-3
Cable-In-Place (Part-In-Place) switch .....	G2-5
Ejector system .....	G2-7
Flow control valve adjustments .....	G2-8
Cam slot/cam roller alignment .....	G2-9
Shut height adjustment .....	G2-10
Cable Processor Module removal and installation .....	G2-11
<b>SECTION G3: TOOL MAINTENANCE .....</b>	<b>G3-1</b>
Avoiding damage .....	G3-1
Removing the tool .....	G3-2
Lapping the nozzle seat .....	G3-4
Tool repair - cavity and tool faces .....	G3-5
Ejector pins .....	G3-5
<b>SECTION G4: PREVENTATIVE MAINTENANCE SCHEDULE .....</b>	<b>G4-1</b>
<b>SECTION G5: TROUBLESHOOTING .....</b>	<b>G5-1</b>
Problem: Runner tail too long or too short .....	G5-1
Cause: Incorrect nozzle temperature balance .....	G5-1
Problem: Alarm push button illuminates, and the system will not cycle. ....	G5-4
Cause: A Cable Processor Module or machine switch has failed to open .....	G5-4
System operational problems .....	G5-5
<b>SECTION H: FISHERTECH RENEWAL PARTS SALES AND SERVICE .....</b>	<b>H-1</b>
Renewal Parts .....	H-1
Service and Training .....	H-1
Troubleshooting Hotline .....	H-1
After-hours Service .....	H-1
Emergency Service Response .....	H-1
Service and Maintenance Contracts .....	H-2
Training .....	H-2

---

---

IMA RENEWAL PARTS -----	H-3
ORDER NUMBER CROSS-REFERENCE -----	H-3
<b>Properties Of Zinc Alloys -----</b>	<b>H-7</b>
<b>SECTION I: INDEX -----</b>	<b>I-1</b>
<b>SECTION J: VENDOR SUPPLIED BULLETINS -----</b>	<b>J-1</b>
<b>SECTION K: MACHINE REFERENCE DRAWINGS -----</b>	<b>K-1</b>
<b>SECTION L: CABLE PROCESSOR MODULE REFERENCE DRAWINGS -----</b>	<b>L-1</b>
<b>SECTION M: TOOL REFERENCE DRAWINGS -----</b>	<b>M-1</b>