
SECTION I: INDEX

A

Accumulator, injection B1-15
maintenance G1-12

Alignment, nozzle seat/nozzle tip E- 4
checking G1-18
correcting poor alignment G1-18
procedure, nozzle alignment G1-16

Alloy D-3
contamination D-4
recycling D-5

Automatic mode, production cycle F-3

C

Cable Processor Module
introduction A-2
reference drawings L-1
removal and installation G2-11

Cable Processor Module Closed proximity switch B2-2
adjustments G2-3

Cable Processor Module Components B2-1
Cable-In-Place sensor B2-1
Cable-In-Place pressure switch B2-2
hose B2-2
needle valve B2-2
pneumatic regulator and gauge B2-2
cam slot and roller B2-3
CPM Closed proximity switch B2-2, G2-3
ejector system B2-3
flow control valves B2-3
handle B2-3
main slide B2-3
Open/Close cylinder B2-3

Cable Processor Module Maintenance
Cable-In-Place pressure switch, operation G2-5
cam slot/cam roller alignment G2-9

CPM Closed proximity switch G2-3
CPM removal and installation G2-11
ejector system G2-7
flow control valve adjustments G2-8
shut height adjustment G2-10

Cable termination equipment A-3

Cable-In-Place pressure switch B2-2
operation and adjustments G2-5

Cable-In-Place sensor B2-1

CAFE system A-4

Cam slot and roller B2-3
alignment G2-9

Cavity B3-1

Cavity insert B3-2

Cavity lubricator B1-11
relief valve B1-11
adjustment G1-29
setup and adjustment G1-29

Contact, melt pot heater B1-14

Control panel B1-1

Coolant supply and drain B1-6
pot frame cooling coil B1-6
service requirements D-2
setup E- 3
tool coolant circuit B1-6

Cooling coil, melt pot frame B1-6

Counter, cycle B1-4

CPM-1 system A-3

CPM-5 system A-4

Cycle counter B1-4

Cylinder, Injection B1-5

D

DC power supply B1-13

Drawings

- Cable Processor Module reference L-1
- Machine reference K-1
- Tool reference M-1

Drop-out timer, injection G1-12

Dry cycle F-1

E

Ejector pins B3-2

- flashing G3-5

Ejector system B2-3

- operation and adjustments G2-7

Electrical enclosure B1-11

- DC power supply B1-13
- fuses B1-13
- main disconnect breaker B1-13
- Master Control Relay (MCR) B1-13
- melt pot heater contactor and solid state relay B1-14
- Programmable Logic Controller (PLC) B1-13
- surge protector B1-14
- time switch B1-12

Electrical supply D-2

- power conditioning D-2

Element B1-7

- replacement G1-23

Emergency Stop (E-Stop) illuminated push

- button B1-10

F

Feeder. See Ingot feeder

Fill gap B1-6

- adjustment G1-10

Fill slot B1-5

Filter, pneumatic system B1-14

- maintenance G1-30

Fishertech Renewal Parts and Service H-1

- After-hours Service H-1
- Emergency Service Response H-1
- Service and Maintenance Contracts H-2
- Service and training H-1
- Training H-2
- Troubleshooting Hotline H-1

Fitting injection plunger to sleeve G1-12

Fixed tool B3-1

- cavity insert B3-2
- ejector pins B3-2
- fixed tool holder B3-1
- nozzle seat B3-1
- runner system B3-2

Flash guard B3-2

Flashing

- ejector pin G3-5
- parting line G3-5

Floor space requirements D-1

Flow control valves B1-8, B1-15, B2-3

- adjustments G2-8

Fuses B1-13

G

Gas supply D-2

Gooseneck assembly B1-5

- fill slot B1-5
- injection sleeve B1-5

H

Handle, Cable Processor Module B2-3

Heat balance, nozzle C-8

Heater, nozzle. *See* Nozzle heater

Heating element B1-7
replacement G1-23

Hinge Pin-In-Place proximity switch B1-9

Horizontal Cable system A-3

Hose, Cable-In-Place sensor B2-2

Hoses, pneumatic system B1-15

|

Ingot feeder B1-7
setup and adjustments G1-31

Injected Metal Assembly process
overview A-1

Injection accumulator B1-15
maintenance G1-12

Injection capacity D-1

Injection drop-out timer G1-12

Injection Off push button B1-10

Injection On illuminated push button B1-10

Injection plunger B1-5
cleaning G1-6
fitting to sleeve G1-12
removal and installation G1-3

Injection sleeve B1-5
fitting plunger to G1-12
reaming G1-6

Injection unit B1-4
fill gap B1-6
adjustment G1-10
gooseneck assembly B1-5
fill slot B1-5
gooseneck B1-5
injection sleeve B1-5
Injection cylinder B1-5
injection lever B1-5

injection nozzle B1-5
plunger B1-5
removal and installation G1-8
Y-bracket B1-5

Installation, system D-1
tooling D-7, E-1

L

Lapping
nozzle G1-15
nozzle seat G3-4

Lever, injection B1-5

Lifting the machine D-6

Limit switch, Moving Mechanism Advanced
G1-26

Lubricants
pneumatic component lubricator D-3
tool lubricator D-3

Lubricator, cavity B1-11
relief valve B1-11, G1-29
setup and adjustment G1-29

Lubricator, pneumatic system B1-15
adjustment G1-28

M

Machine maintenance
cavity lubricator - setup/adjustment G1-29
checking nozzle alignment G1-18
checking switch settings G1-1
fill gap adjustment G1-10
fitting the injection plunger to the sleeve G1-12
heating element replacement G1-23
ingot feeder setup/adjustments G1-31
injection accumulator G1-12
injection drop-out timer G1-12
injection plunger cleaning G1-6
injection sleeve reaming G1-6
injection unit removal and installation G1-8

lapping the nozzle G1-15
melt pot level adjustment G1-31
melt pot removal/installation G1-20
moving mechanism and limit switch G1-26
nozzle heater G1-19
nozzle removal and replacement G1-13
nozzle seat/nozzle tip alignment G1-16
pneumatic component lubricator adjustment G1-28
pneumatic filter G1-30
Quick Dump/Soft Start air supply valve G1-30
replacing melt pot thermocouple G1-22

Machine reference drawings - Section K-1

Main disconnect breaker B1-13

Main slide B2-3

Maintenance bulletins, vendor supplied - Section J-1

Maintenance, Cable Processor Module. *See* Cable Processor Module maintenance

Maintenance, machine. *See* Machine maintenance

Maintenance, tool. *See* Tool maintenance

Manual mode, production cycle F-2

Master Control Relay (MCR) B1-13

Melt pot B1-7
assembly B1-7
frame B1-7
heater contactor and solid state relay B1-14
heating element B1-7
level adjustment G1-31
removal and installation G1-20
replacing thermocouple G1-22
temperature controller B1-4
time switch B1-12

Melt pot heater contactor and solid state relay B1-14

Mixing block, nozzle heater B1-6

Movable tool B3-2
flash guard B3-2

movable tool cavity insert B3-2
movable tool holder B3-2
safety pin B3-2

Moving mechanism B1-8, G1-26

Advanced limit switch B1-8
flow control valves B1-8
hinge pin B1-9
Hinge Pin-In-Place proximity switch B1-9
link pin B1-9
linkage B1-9
maintenance G1-26
ratchet pin B1-9

Moving Mechanism Advanced limit switch B1-8
maintenance G1-26

N

Needle valve, Cable-In-Place sensor B2-2

Nozzle B1-5
lapping G1-15
removal and replacement G1-13

Nozzle heat balance C-8

Nozzle heater B1-6
adjusting flame G1-19
adjusting valves B1-6
air and gas valves B1-6
heat balance C-8
setup E-3
mixing block B1-6
pneumatic regulator B1-6
setup E-3
twin torch tip B1-7

Nozzle seat B3-1
lapping the nozzle seat G3-4

Nozzle seat/nozzle tip
alignment G1-16
correcting poor alignment G1-18

O

Open/Close cylinder B2-3

Operating sequence F-1

Operational problems G5-5

Operator interface module B1-3
checking switch settings G1-1

Operator's duties
at beginning of production F-4
at end of production F-6
during production F-4

Option 1 Cable Processor Module A-2

P

PLC. *See* Programmable Logic Controller

Plunger B1-5
cleaning G1-6
fitting to sleeve G1-12
removal and installation G1-3

Pneumatic component lubricator B1-14
adjustment G1-28

Pneumatic filter B1-14
maintenance G1-30

Pneumatic regulator/valve, C-I-P sensor B2-2

Pneumatic supply D-2

Pneumatic system B1-14
filter B1-14
flow control valves B1-15
hoses B1-15
injection accumulator B1-15
lubricator B1-15
pneumatic valves B1-15
Quick Dump/Soft Start pneumatic supply valve B1-15
setup E-1

Pneumatic valves B1-15

Positioning and levelling D-7

Power conditioning D-2

Preventative maintenance schedule G4-1

Production cycle, automatic mode F-3

Production cycle, manual mode F-2

Programmable Logic Controller (PLC) B1-13

Push button station
Emergency Stop (E-Stop) illuminated push button B1-10
Injection Off push button B1-10
Injection On illuminated push button B1-10
Start push button B1-10

Push buttons B1-2

Q

Quick Dump/Soft Start air supply valve B1-15
maintenance G1-30

R

Reference drawings
Cable Processor Module - Section L-1
Machine - Section K-1
Tool - Section M-1

Regulator and gauge, Cable-In-Place sensor B2-2

Relief valve, cavity lubricator B1-11
maintenance G1-29

Return procedure - equipment A-6

Runner system B3-2
troubleshooting G5-1

S

Safety

- for your safety iii
- personal protective attire and devices iv
- precautions iv
- system setup - first alloy shots vi

Safety pin B3-2

Service requirements D-1

Services, connecting D-7

Setup

- checking the coolant system E- 3
- checking the nozzle alignment E- 4
- checking the nozzle heater E- 3
- checking the pneumatic system E- 1
- checking the timer settings E- 4
- installing the tooling E- 1
- turning the main breaker on E- 1
- turning the melt pot on E- 3

Shut height adjustment G2-10

Sleeve, injection B1-5

- fitting plunger to G1-12
- reaming G1-6

Solid state relay B1-14

Sound level D-1

Specifications D-1

- Vendor supplied specifications - Section J-1

Sprue type operation C-1

Sprueless type operation C-8

Start push button B1-10

Start up and operation

- duties at beginning of production F-4
- duties at end of production F-6
- duties during production F-4
 - ingot feeder F-5
- system cycling F-1
 - dry cycle F-1

- production cycle, automatic mode F-3
- production cycle, manual mode F-2

Surge protector B1-14

Switch settings

- checking using operator interface module G1-1
- limit switch, Moving Mechanism Advanced G1-26

System installation D-1

- connecting the services D-7
- general specifications D-1
- lifting the machine D-6
- positioning and levelling D-7
- service requirements D-2
- uncrating components D-6

System operational problems G5-5

System setup

- checking the coolant system E- 3
- checking the nozzle alignment E- 4
- checking the nozzle heater E- 3
- checking the pneumatic system E- 1
- checking timer settings E- 4
- intalling the tooling E- 1
- turning the main breaker on E- 1
- turning the melt pot on E- 3

T

Temperature controller, melt pot B1-4

Terminology A-7

Theory of Operation

- nozzle heat balance C-8
- sprue type operation C-1
- sprueless type operation C-8

Thermocouple B1-7

- replacing G1-22

Thermocouple assembly B1-7

- protector tube B1-7
- thermocouple B1-7

Time switch B1-12

Timer, injection drop-out G1-12

Timer settings E- 4

Tool coolant circuit B1-6

Tool installation D-7, E- 1

Tool maintenance

avoiding damage G3-1

ejector pins G3-5

flashing G3-5

lapping the nozzle seat G3-4

removing the tool G3-2

tool repair G3-5

drag or scratches on termination G3-5

parting line flash G3-5

Tool reference drawings - Section M-1

Tool removal G3-2

Tool repair

drag or scratches on termination G3-5

parting line flash G3-5

Tooling Components

cavity B3-1

fixed tool B3-1

cavity insert B3-2

ejector pins B3-2

fixed tool holder B3-1

nozzle seat B3-1

runner system B3-2

movable tool B3-2

cavity insert B3-2

flash guard B3-2

movable tool holder B3-2

safety pin B3-2

Troubleshooting G5-1

Alarm illuminated push button lights G5-4

runner too long or too short G5-1

switch failure G5-4

system operational problems G5-5

Twin Torch Tip, nozzle heater B1-7

U

Uncrating components D-6

V

Valves, pneumatic B1-15

Vendor Supplied Bulletins - Section J-1

W

Warranty A-5

Weight D-1

Y

Y-bracket B1-5

Z

Zinc alloys

preventing contamination of D-5

recycling D-5

used in the IMA process A-2

