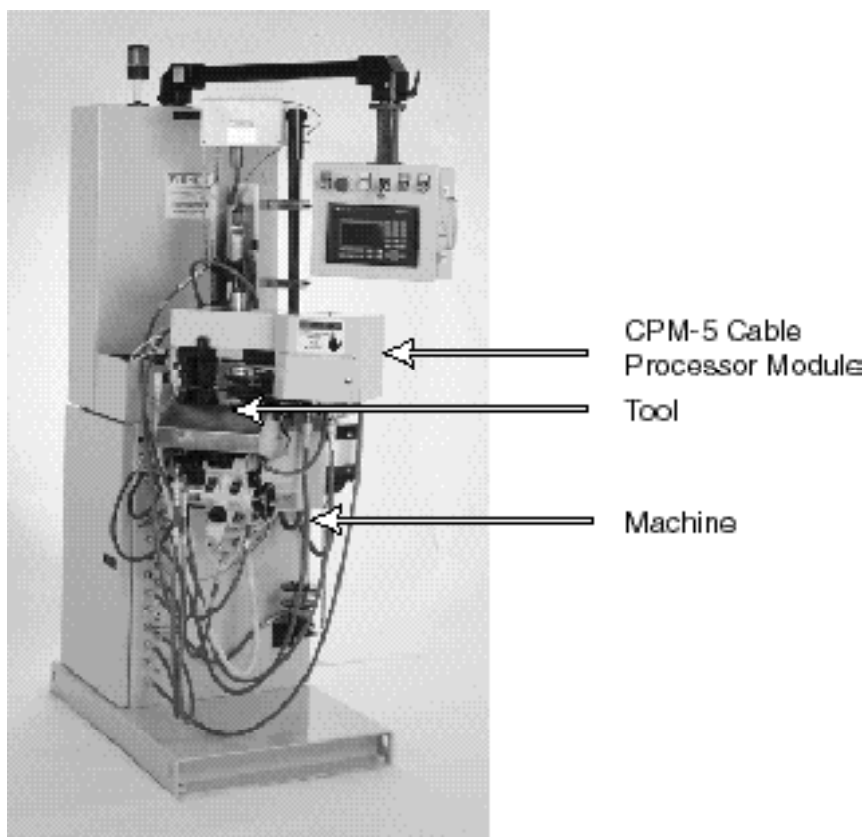

CPM-5 INJECTED METAL ASSEMBLY™ SYSTEM

OPERATION AND MAINTENANCE MANUAL



© 1999 Fisher Gauge Limited

Contents

DISCLAIMER	i
ABOUT THIS OPERATION AND MAINTENANCE MANUAL	ii
FOR YOUR SAFETY	iii
SAFETY PRECAUTIONS	iv
YOUR OPERATING AND MAINTENANCE MANUAL	vii
SECTION A: INTRODUCTION	A-1
Overview of the Injected Metal Assembly (IMA™) process	A-1
Introduction to the CPM-5 Injected Metal Assembly system	A-2
Fishertech's cable termination equipment	A-3
General equipment warranty	A-5
Equipment return procedure	A-6
Terminology pertaining to your IMA system	A-7
SECTION B: SYSTEM OPERATING COMPONENTS	B1-1
SECTION B1: MACHINE COMPONENTS	B1-1
Control pendant	B1-1
Push buttons	B1-2
Operator Interface Terminal	B1-3
Injection unit	B1-4
Gooseneck assembly	B1-4
Y-bracket	B1-5
Plunger	B1-5
Link	B1-5
Injection lever	B1-5
Injection cylinder	B1-5
Injection nozzle	B1-5
Fill gap	B1-5
Coolant supply and drain	B1-6
Melt Pot frame cooling coil	B1-6
Tool coolant circuit	B1-6
Nozzle heater	B1-6
Pneumatic regulator	B1-6
Air and gas valves	B1-6
Mixing block	B1-6
Adjusting valves	B1-6
Twin torch tip	B1-6
Nozzle Heater (Electric)	B1-7

Melt pot	B1-7
-----	B1-7
Melt pot frame	B1-7
Melt pot assembly	B1-7
Thermocouple assembly	B1-7
Protector tube	B1-7
Thermocouple	B1-7
Ingot feeder (optional)	B1-8
Moving mechanism	B1-8
Moving Mechanism Advanced limit switch	B1-9
Flow control valves	B1-9
Linkage	B1-9
Ratchet pin	B1-9
Link pin	B1-9
Hinge pin	B1-9
Hinge Pin-In-Place proximity switch	B1-9
Cavity lubricator	B1-10
Electrical enclosure	B1-10
Time switch	B1-11
Main circuit breaker	B1-12
Master Control Relay (MCR)	B1-12
Programmable Logic Controller (PLC)	B1-12
Fuses	B1-13
DC power supply	B1-13
Surge protector	B1-13
Melt pot heater contactor and solid state relay	B1-13
Pneumatic system	B1-13
Filter	B1-14
Quick Dump/Soft Start pneumatic supply valve	B1-14
Lubricator	B1-14
Pneumatic valves	B1-14
Injection accumulator	B1-15
Hoses	B1-15
Flow control valves	B1-15
 SECTION B2: CABLE PROCESSOR MODULE COMPONENTS	 B2-1
Cable-In-Place sensor	B2-1
Cable-In-Place pressure switch	B2-1
Hose	B2-1
Needle valve	B2-2
Pneumatic pressure regulator and gauge	B2-2
Cable Processor Module Closed proximity switch	B2-2
Cable Upsetter	B2-2
Cam slot and roller	B2-2
Flow control valves	B2-2
Main slide	B2-2
Close/Open cylinder	B2-2

Ejector system	B2-2
Ejector pin	B2-2
Ejector pin retainer	B2-3
Ejector pin retracted stop screw	B2-3
Transfer unit	B2-3
SECTION B3: CABLE PROCESSOR TOOLING COMPONENTS	B3-1
Cavity	B3-1
Fixed tool	B3-1
Movable tool	B3-2
Upsetter tooling	B3-3
Degating tooling	B3-3
Transfer tooling	B3-3
SECTION C: THEORY OF OPERATION	C-1
Sprue type operation	C-1
Sprueless type operation	C-8
Nozzle heat balance	C-8
SECTION D: SYSTEM INSTALLATION	D-1
General system specifications	D-1
Maximum injection capacity	D-1
Floor space required	D-1
Weight	D-1
Sound level	D-1
System service requirements	D-2
Electrical supply	D-2
Power conditioning	D-2
Pneumatic supply	D-2
Coolant supply	D-2
Coolant drain	D-2
Gas supply	D-2
Lubricants	D-3
Alloy	D-3
Contamination of zinc alloy supplies	D-4
Preventing contamination of zinc alloy	D-4
Preventing change in alloy composition	D-5
Recycling zinc alloys	D-5
Installing the IMA system	D-6
Uncrating system components	D-6
Lifting the machine	D-6
Positioning and levelling	D-7
Connecting the services	D-7
Installing the tooling	D-7
SECTION E: SYSTEM SETUP	E- 1
Turning the main breaker on	E- 1
Checking the pneumatic system	E- 1

Installing the tooling	E- 1
Checking the coolant system	E- 3
Turning the melt pot on	E- 4
Checking the nozzle heater	E- 4
Checking the nozzle alignment	E- 4
Checking timer settings	E- 4
SECTION F: START UP AND OPERATION	F-1
The operating sequence	F-1
System cycling	F-1
Dry cycle	F-3
Production cycle, Run Semi-automatic mode	F-3
Production cycle, Run Manual mode	F-4
Operator's duties at the beginning of production	F-5
Operator's duties during production	F-6
Operator's duties at the end of production	F-8
SECTION G: INJECTED METAL ASSEMBLY SYSTEM MAINTENANCE	G1-1
SECTION G1: MACHINE MAINTENANCE	G1-1
Control Pendant	G1-2
Emergency Stop (E-Stop) push button	G1-2
Master Control Relay (MCR)	G1-3
Setup/Run key selector switch	G1-3
Operator Interface Terminal (OIT)	G1-4
Main Menu screen	G1-4
Run Mode Option Menu screen	G1-5
Setup Oph1 screen	G1-6
Setup Oph2 screen	G1-7
Run Semi-automatic screen	G1-8
Run Manual screen	G1-9
Process Timers screen	G1-11
Melt Pot Control screen	G1-12
Oph Diagnostics screen	G1-13
Switches sticking closed	G1-14
Switches failing to close	G1-14
Process Diagnostics screen	G1-15
Injection plunger removal and installation	G1-17
Injection plunger cleaning/injection sleeve reaming	G1-20
Injection unit removal and installation	G1-22
Fill gap adjustment	G1-24
Fitting the injection plunger to the sleeve	G1-26
The injection drop-out timer	G1-26
The injection accumulator	G1-26
Nozzle removal and replacement	G1-27
Lapping the nozzle	G1-30
Nozzle seat/nozzle tip alignment	G1-31

Nozzle alignment procedure -----	G1-32
The nozzle heater -----	G1-34
Spark Igniter and Flame Detector -----	G1-34
The Electric Nozzle Heater (if used) -----	G1-35
Melt pot removal and installation -----	G1-36
Installation of the melt pot -----	G1-37
Replacing the melt pot thermocouple -----	G1-38
Heating element replacement -----	G1-39
The moving mechanism and limit switch -----	G1-42
Pneumatic component lubricator adjustment -----	G1-44
Cavity lubricator - setup and adjustment -----	G1-45
Relief valve -----	G1-45
The pneumatic filter -----	G1-46
Quick Dump/Soft Start air supply valve -----	G1-46
Ingot feeder setup and adjustments (if used) -----	G1-47
Melt pot level adjustment -----	G1-47
Maintaining the melt pot level -----	G1-47
To Adjust the Flow Control Valves -----	G1-48
SECTION G2: CABLE PROCESSOR MODULE MAINTENANCE -----	G2-1
Cable Processor Module Closed proximity switch -----	G2-3
The cable upsetter and the Cable Loaded proximity switch -----	G2-5
Operation of the cable upsetter -----	G2-5
Adjustments to the cable upsetter -----	G2-6
Positioning the upset in the tool cavity -----	G2-7
Cable-In-Place (Part-In-Place) switch -----	G2-8
The transfer unit and the Transfer Unit Locked proximity switch -----	G2-10
Operation of the transfer unit -----	G2-10
Adjustments to the transfer unit -----	G2-10
Ejector system -----	G2-14
Flow control valve adjustments -----	G2-15
The upset sensor and Upset Sensor proximity switch -----	G2-16
Operation of the upset sensor -----	G2-16
Adjustments to the upset sensor -----	G2-17
Replacing the Upset Sensor proximity switch -----	G2-18
Cam slot/cam roller alignment -----	G2-19
Shut height adjustment -----	G2-20
Cable Processor Module removal and installation -----	G2-21
SECTION G3: TOOL MAINTENANCE -----	G3-1
Avoiding damage -----	G3-1
Removing the tool -----	G3-3
Lapping the nozzle seat -----	G3-5
Tool repair - cavity and tool faces -----	G3-6
Ejector pins -----	G3-7

Cable upsetter tooling -----	G3-7
Degating (Trim) tooling -----	G3-8
SECTION G4: PREVENTATIVE MAINTENANCE SCHEDULE -----	G4-1
SECTION G5: TROUBLESHOOTING -----	G5-1
Problem: Runner tail too long or too short -----	G5-1
Cause: Incorrect nozzle temperature balance -----	G5-1
Operational problems not displayed on the Operator Interface Terminal -----	G5-4
Operational problems displayed on the Operator Interface Terminal -----	G5-8
SECTION H: FISHERTECH RENEWAL PARTS SALES AND SERVICE -----	H-1
Renewal Parts -----	H-1
Service and Training -----	H-1
Troubleshooting Hotline -----	H-1
After-hours Service -----	H-1
Emergency Service Response -----	H-2
Service and Maintenance Contracts -----	H-2
Training -----	H-2
IMA Renewal Parts Order Numbers -----	H-3
SECTION I: INDEX -----	I-1
SECTION J: VENDOR SUPPLIED BULLETINS -----	J-1
Theben Timer Instructions -----	J-2
Watlow Instructions -----	J-6
SECTION K: MACHINE REFERENCE DRAWINGS -----	K-1
SECTION L: CABLE PROCESSOR MODULE REFERENCE DRAWINGS -----	L-1
SECTION M: TOOL REFERENCE DRAWINGS -----	M-1